



Tech 217-935-2076 Fax 217-935-4611
www.andersonfordmotorsport.com

Supplement instructions




If using ACT sensor drill here and tap to 3/8 pipe.



If retaining heater lines cut pipe here and install short pipe like in complete picture.



If retaining vacuum brakes drill here and tap to size.

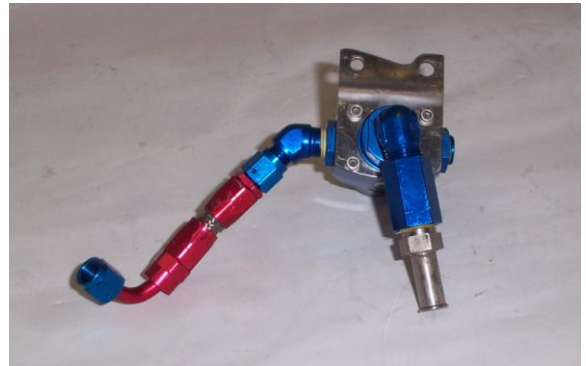

Flatten regulator bracket and modify shape.



Ready for install.